



# QUICK SET UP GUIDE


## BEACON

### VHRP-1200

Hybrid Turntable with Bluetooth® & FM Radio

#### BASIC SETUP OF THE VHRP-1200 Turntable:

##### Connect to Power Source






1. Plug the small end of the power cord into the POWER Input on the back of the unit, and the large plug into a standard wall power outlet.
2. Press the **Power**  button to turn on the unit

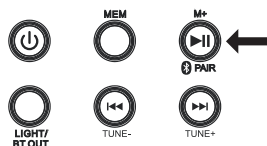


##### PREPARE TURNTABLE FOR PLAYING RECORDS




1. Remove cap protecting stylus.
2. Remove twist tie used to secure the Tone Arm in place.

##### CONNECT BLUETOOTH® IN

1. Press the **Power**  button to turn on the unit and set the Function Dial to **BT**.
2. Press and hold the  PAIR button, the Bluetooth icon  will blink. The unit will go into Pairing/Discoverable mode.
3. The Bluetooth® icon  will turn on and blink on the LCD DISPLAY. When pairing, remain within 3 feet of the unit.
4. Turn on the Bluetooth® function of your device and search for nearby Bluetooth® devices.
5. Select **"VICTOR VHRP-1200"** from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) Turntable with your device.
6. When successfully paired and connected, an audible chime will sound and Bluetooth icon  will light steadily on the LDC DISPLAY.



##### CONNECT BLUETOOTH® OUT

1. POWER on the unit, set **FUNCTION** dial to phono mode.
2. Press and hold **BT OUT** button. The unit enters pairing mode and BT indicator  blinks.
3. Turn on your Bluetooth speakers and begin searching for speakers.
  - a. If you have several Bluetooth receivers, turn off receivers not in use to avoid Turntable linking to other unwanted Bluetooth enabled devices.
  - b. The effective distance between your external device and turntable is 33 feet (10 meters).
4. Turntable will auto scan and pair with your Bluetooth receiver nearby, BT indicator  will stop blinking to indicate a connection has been established.
5. Play music on Turntable in Phono or AUX mode. You will no longer hear sound on the turntable speakers. Instead, music will be played on your connected Bluetooth® device.
6. Press and hold the **BT OUT** button when you finish listening in Bluetooth transmitter mode, BT indicator  will be off and unit speaker will sound again.



*\*This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at [www.victor-brand.com](http://www.victor-brand.com). All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.*

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION