



**METRO PLUS**  
Dual Bluetooth® Suitcase Turntable  
with Built-in Rechargeable Battery  
VSRP-850B



**Instruction Manual**

Please read carefully before use and keep for future reference

# WARNING



**CAUTION:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



**WARNING:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
16. The use of the equipment in moderate climate.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. Do not place open flame sources, such as lighted candles, on the apparatus.
19. The symbol with ~ indicates AC voltage.
20. **CAUTION.** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



# TABLE OF CONTENTS

FEATURES.....	3
SPECIFICATIONS.....	3
PRODUCT OVERVIEW.....	4
SET UP & BASIC OPERATION.....	5
MAINTENANCE.....	6
FCC NOTICE.....	8
CAUTION ON MODIFICATIONS.....	9
SUPPORT.....	9

# FEATURES

- 3-SPEED TURNTABLE -- 3-Speed Belt-driven Record Player will play all your 33 1/3, 45, 78 RPM Vinyl Records. Includes adapter for 45 RPM Records.
- BLUETOOTH IN -- Allows you to stream music, audiobooks, podcasts, and more from your Phone or another Smart Device. Enjoy the wireless connection with your device up to 33 feet away.
- BLUETOOTH OUT -- Wirelessly stream your Records to any external Bluetooth Speaker or Wireless Headphones for ultimate music playback. Control the volume of the speaker with the unit or your smartphone/device.
- VERSATILE CONNECTIVITY -- 3.5mm Aux Input and RCA Audio Output for additional connectivity.
- BUILT-IN STEREO SPEAKERS -- Built-in Stereo Speakers provide an enjoyable playback experience with no other connections necessary. and you are ready to enjoy all the features.
- RECHARGEABLE BATTERY -- Ensure the fun never has to stop by keeping the speaker at a full charge with the included charging cable
- ADDITIONAL FEATURES -- Secure case latch, Corner protectors, Auto stop control, Speed selector (33.3, 45, 78 rpm), Volume control, Headphone jack, Line Out

# SPECIFICATIONS


Product Name	METRO PLUS (Dual Bluetooth Suitcase Turntable)
Turntable Speed	33 1/3, 45, 78 RPM
Bluetooth® Version	Bluetooth® V5.3
Bluetooth® Frequency	2.40 GHz
Bluetooth® Operating Distance	Up to 33 Feet (10 Meters)*
Input	Aux In
Output	Line Out
Built-in Speakers	2" x 2
Speaker Output Power	2W x 2
Power Source	AC/DC 100-240V~50/60Hz 5V/1A
Accessories Included	ETL Approved Power Adaptor, User Manual, Quick Set Up Guide

\*Distance may vary depending on any objects or interference between devices.


SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

# PRODUCT OVERVIEW

1. Turntable Platter
2. Turntable Shaft
3. Tonearm
4. Tonearm Lever
5. Auto-stop Switch
6. Speed Switch
7. Hold Down Clip
8. 45 RPM Adapter
9. Mode Indicator
10. Mode Knob
11. Charging Indicator
12. Power/Volume Knob
13. Headphone Jack

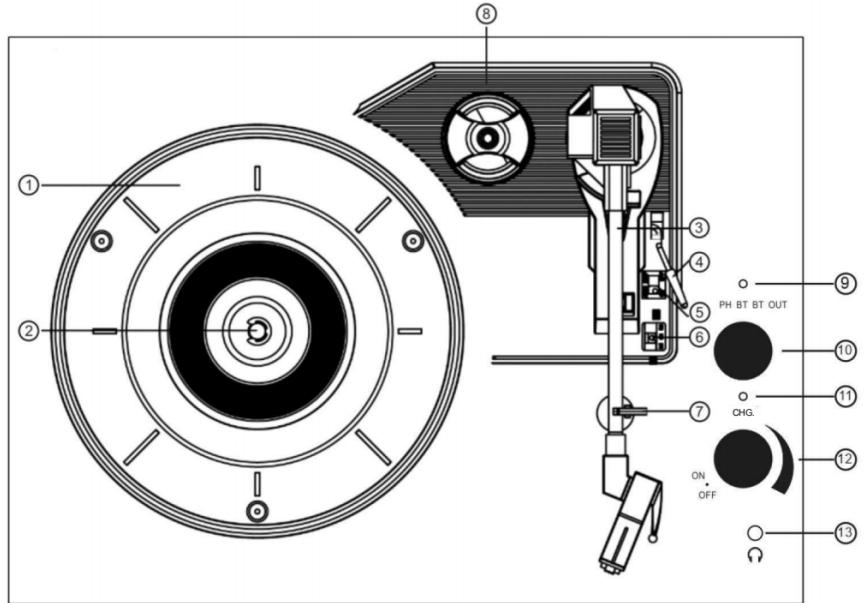

14. LINE OUT Port
15. AUX IN Jack
16. Charging Port

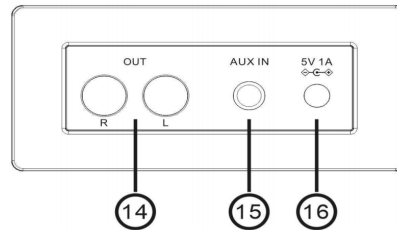

## Turntable Operation

1. Rotate the knob to the PHONO mode.
2. Select the desired speed (33 1/3, 45, 78) and place the record on the platter. (Remark: When playing a 45 RPM record, please use the 45 RPM adapter.)
3. Remove the stylus protector from the stylus. Release the tone arm from the tone arm clip.
4. Use the tonearm lever to raise the tonearm. Move the tonearm gently to the desired position over the record. Push the lift lever again to slowly descend the tonearm onto the desired position on the record to start playing.
5. When the record is finished playback, push the tonearm lever again to lift the tonearm. And return the tonearm to the armrest. Use the tonearm lever to descend the tonearm.

Remark:

-When the Auto-stop switch is "ON," the record will stop automatically when finished. When the Auto-stop switch is "OFF," the record will not stop automatically when finished.

-Do not touch the stylus tip with your fingers.

## Audio Out Operation

The audio Jacks output analog line-level signals and could be connected directly with a pair of active/powerd speakers or the appropriate input of your stereo system.

Note: The Audio Jacks are not designed to be connected directly to the passive/underpowered speakers. If connected to the passive speakers, the volume level will be very low.

## Headphone Operation

This unit can be connected with headphone by headphone jack.

# SET UP & BASIC OPERATION

## Battery Precautions

The unit is supplied with a rechargeable lithium battery.

Warning: Do not expose the battery to excessive heat, such as strong sunlight or fire.

Important: The battery compartment is not accessible to the user. It is reserved for after-sales service.

Important: Do not charge the AC/DC adapter battery for more than 24 hours.

If the unit has not been used for a long time, the rechargeable battery may be completely discharged into a "sleep mode" condition. This is characteristic of rechargeable batteries. To avoid a complete battery discharge, charge the unit at least once every month.

Use only the supplied rechargeable battery.

## Battery Charging

Connect the unit by adapter and inserting it into the Charging port, and plug the adaptor into an AC wall outlet. When charging, the charging indicator light will be illuminated. It will turn off when the unit is fully charged.

## Essential Setup

Rotate the ON/OFF-VOLUME knob to turn on/off the unit.

## Bluetooth In Operation

1. Rotate the Mode knob to the " BT "Bluetooth In mode, the mode indicator will be blue and flashing.
2. Turn on the Bluetooth feature of your audio device, search for "VICTOR VSRP-850B" and pair.
3. Once your device is successfully connected with the speakers, you will hear a short confirmation sound from the speakers and function indicator will be solid blue.
4. Play and stream music from your device to the speakers.

## Connect the Turntable to an External Bluetooth® Speaker

This function can transmit the record playing on the unit to an external Bluetooth speaker or headphones via a Bluetooth wireless connection.

1. Rotate the Mode knob to the "BT OUT" Bluetooth Out position; the mode indicator will be blue and flashing.
2. Turn on the external Bluetooth receiver device (i.e., Bluetooth Speaker or Bluetooth Headphone) and enter the pairing mode.
3. The turntable unit and external Bluetooth receiver will connect automatically. (Remark: Place the Bluetooth receiver device within 1m of the unit to connect properly.)
4. Once the turntable unit is successfully connected to the external Bluetooth speakers and the function indicator will be solid blue.
5. Select the desired speed (33 1/3, 45, 78) and place the record on the platter. The music will be heard from the external Bluetooth speaker/headphones.
6. Adjust the volume on your unit and device to desired level.

# MAINTENANCE

## **Maintaining the Turntable Needle (“Stylus”)**

To extend the life of your stylus, dust the stylus occasionally with a very soft brush dipped in rubbing alcohol, brushing from the back to the front of the cartridge.

## **Maintaining Vinyl Records**

To maximize sound quality and extend the life of your vinyl records, it is recommended you clean your records with an anti-static cloth after every use.

## **Transporting the Turntable**

1. Place the protective cap on the stylus.
2. Put the rest clip into the pick-up arm.
3. Ensure the case is closed and the latch is secure.

# FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be colocated or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

# IC STATEMENT

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence.

Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.



# CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate this equipment. Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly. Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately. All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.



# SUPPORT

We do our best to offer high quality products to our customers. If you experience any issues or problems with your product, please contact customer support as many issues can be quickly resolved.

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at [www.naxa.com](http://www.naxa.com) to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

## Naxa Technical Support

2320 East 49<sup>th</sup> St.

Vernon, CA 90058

(866) 411-6292

<http://www.naxa.com/supportcenter>

Made in China

*\*This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at [www.victor-brand.com](http://www.victor-brand.com).*

*All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.*