



**NEWBURY
VWRP-3500
8-IN-1 Turntable Music Center**



 
Instruction Manual

Please read carefully before use and keep for future reference

WARNING



CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
16. The use of the equipment in moderate climate.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. Do not place open flame sources, such as lighted candles, on the apparatus.
19. The symbol with \sim indicates AC voltage.
20. **CAUTION,** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



TABLE OF CONTENTS

FEATURES	3
SPECIFICATIONS.....	3
PRODUCT OVERVIEW	4
REMOTE CONTROL	5
SETUP & BASIC OPERATION	6
TROUBLESHOOTING GUIDE.....	9
FCC NOTICE	10
CAUTION ON MODIFICATION.....	11
SUPPORT	11

FEATURES

The Newbury 8-in-1 Music Center features Chair Height legs with an attractive Retro Style. The built in 3-Speed Turntable, CD Player, and FM Radio are ready to play all your favorite songs! The Dual Bluetooth feature allows streaming of your vinyl records to an external Bluetooth Speaker or plays music from your Smart Device through the Newbury's built in Speakers. Placing a thumb Drive into the USB Slot allows Recording and Playback from your records. Can also be used on a Tabletop as base height feet are also included.

- 3-speed record player will play 33 1/3, 45, 78 RPM records
- Bluetooth® In connectivity allows you to stream music from another source up to 33 feet away
- Bluetooth® Out Connectivity allows you to stream vinyl playback through any external Bluetooth Speaker.
- CD/MP3 Player
- USB Input for Playback & One Touch Recording of your favorite Music
- FM Radio
- Includes a 3.5mm Line Input & Audio Output for additional connectivity options
- Built in Stereo Speakers for playback convenience

SPECIFICATIONS

Product Name	NEWBURY (8-IN-1 Turntable Music Center)
Turntable Speed (RPM)	33 1/3, 45, 78
FM Frequency Range	87.5-108MHz
FM Station Memory	Up to 20
Bluetooth® Version	V5.0
Bluetooth® Transmission Distance	Up to 33 Feet (10 Meters)*
Rated Frequency	2.40GHz
Input	Line In, USB
Output	Audio Out
Built-in Speaker	3" x 2
Power Output	5W x 2
Power Source	AC/DC 100-240V 50-60Hz 12V/1.5A
Accessories Included	UL Approved Power Adaptor, Remote Control, Round Base Feet, User Manual, Quick Set Up Guide

*Distance may vary depending on any objects or interference between devices.

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

PRODUCT OVERVIEW

Turntable Features

 
1. Turntable Platter
2. Turntable Shaft
3. Tonearm
4. Tonearm Lever
5. Auto-stop Switch
6. Speed Switch
7. Hold Down Clip
8. 45 RPM Adaptor

Front View

9. **LED Display**
10. **MODE:** Press to change the mode
11. **EJECT:** Press to open the CD door
12. **POWER:** Press to turn on the unit
13. **REPEAT:** In CD/USB mode press once to repeat current song. Press twice to repeat entire disc. Press three times to cancel.
14. **CD Door**
15. **PREVIOUS:** Press for previous track (USB/CD/Bluetooth) or previous station (Radio).
16. **NEXT:** Press for next track (USB/CD/Bluetooth) or next station (Radio)
17. **Volume Knob**
18. **PLAY/PAUSE/BT OUT:** Press to play/pause current track (USB/CD/Bluetooth) or search for station (Radio). Press to mute the sound (Line In). Under Phono mode, hold button to pair/unpair with external Bluetooth® devices.
19. **STOP/REC:** In USB/CD, when press this key first time, the player will stop playing. And press PLAY/PAUSE key will continue to play from current music. When press this key again, the player will enter stop state. And press PLAY/PAUSE key will start from first song. In PHONO mode, press to start/stop recording of music playing from record to USB device. To delete the recorded track, hold button during it is playing (Note: The record function cannot work in the Bluetooth Out status).


Rear View

20. FM Antenna
21. 3.5mm Audio Output Jack
22. 3.5mm Audio Input jack
23. DC 12V power input jack
24. USB port

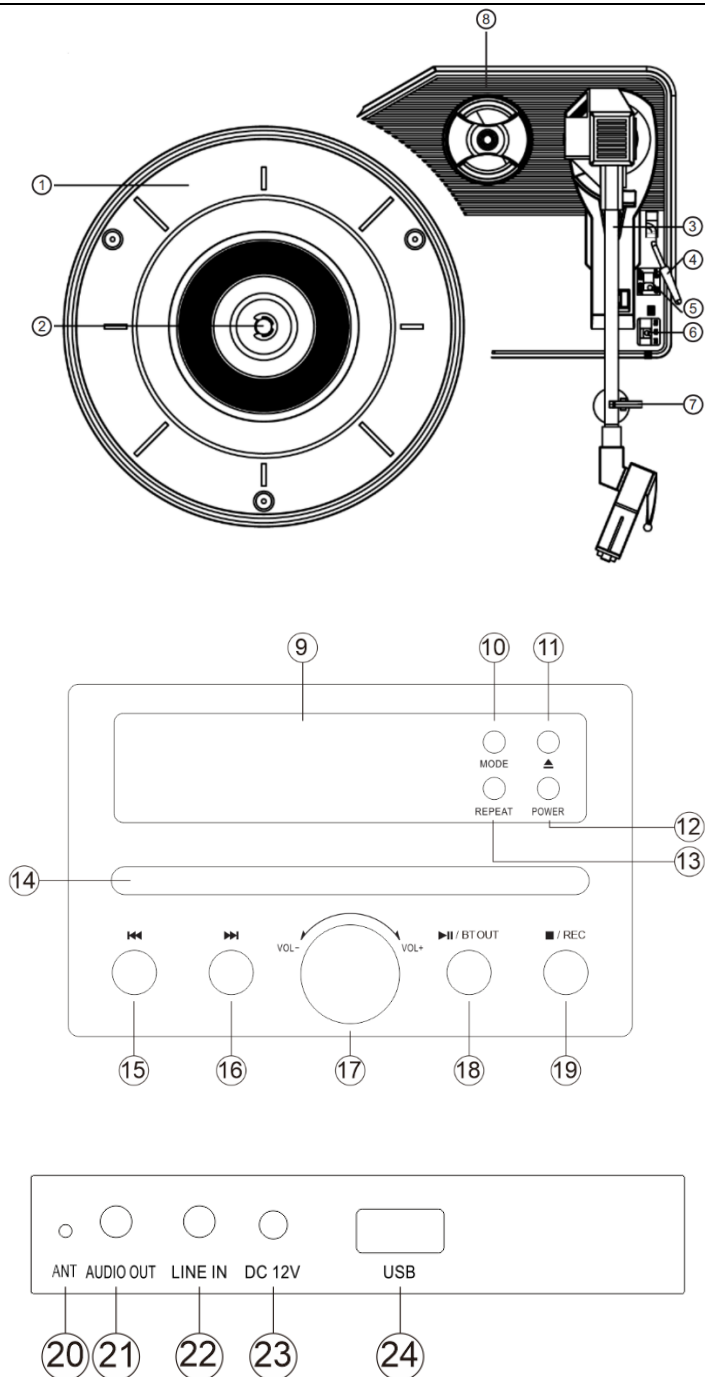

REMOTE CONTROL

 1. **POWER**
2. **MODE:** Press to change the mode
3. **REPEAT:** In CD/USB mode, press once to repeat current song. Press twice to repeat entire disc. Press three times to cancel.
4. **MUTE**
5. **PLAY/PAUSE:** Press to play/pause current track (USB/CD/Bluetooth) or search for stations (Radio). Press to mute the sound (LINE IN). In PHONO mode, hold to pair/unpair with external Bluetooth® devices.
6. **PREVIOUS/NEXT:** Press for previous/next track (USB/CD/Bluetooth) or previous/next station (Radio).
7. **VOLUME KEYS:** Press to turn the volume up/down.
8. **STOP/REC:** In USB/CD, when press this key first time, the player will stop playing. And press PLAY/PAUSE key will continue to play from current music. When press this key again, the player will enter stop state. And press PLAY/PAUSE key will start from first song. In PHONO mode, press to start/stop recording of music playing from record to USB device. To delete the recorded track, hold button during it is playing (Note: The record function cannot work in Bluetooth Out Status).
9. **NUMBER KEYS:** In USB/CD-MP3 mode, use the keys to select a track. In CD mode, to select tracks 1-9, press the corresponding number key (1-9). To select double digit tracks press the (10+) key followed by the corresponding number keys (1-9). For example, to select track 15, press the (10+) key once then the 5 key. To select track 25, press number key (10+) twice and then the 5 key.

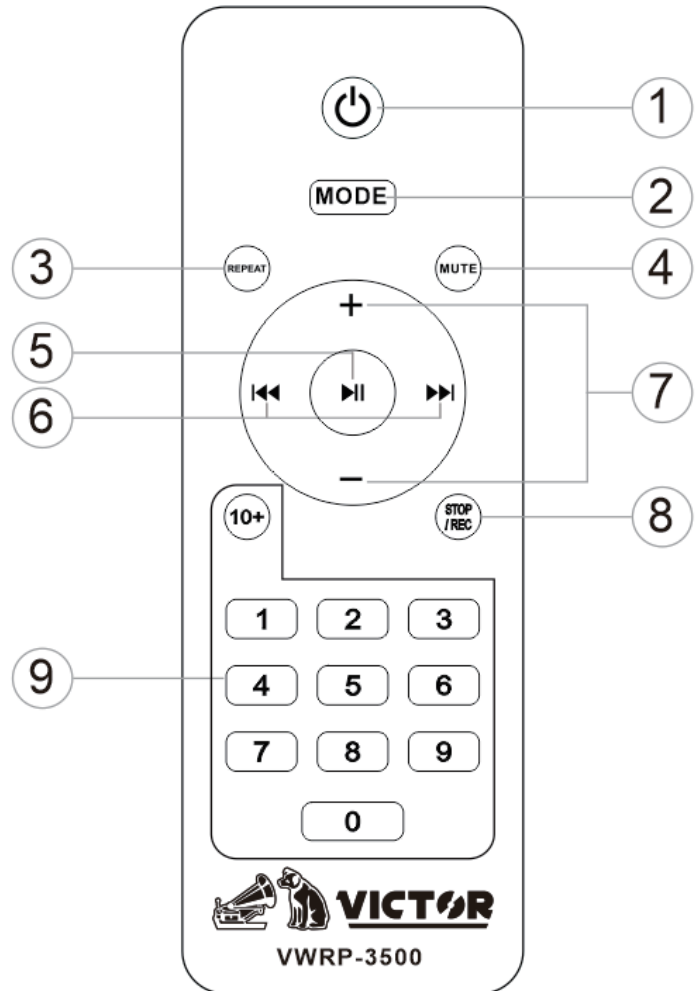

Battery Precautions

- Be sure to insert the battery with correct positive + and negative - polarities.
- When the remote-control unit is not to be used for long periods of time (more than a month), remove the battery from the remote-control unit to prevent it from leaking. If it leaks, carefully wipe away the liquid inside the battery compartment and replace the battery with a new one.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them into a fire.
- Do not mix old and new batteries.
- Use only the same type of batteries.
- Do not dispose of the batteries in fire, battery may explode or leak.
- Do not recharge a non-rechargeable battery.

SETUP & BASIC OPERATION

Essential Setup

1. Install the legs to the brackets on the bottom of the unit. Make sure the unit stands firmly.
2. Place the speakers on a flat and level surface. The selected location should be stable and free from vibration.
3. Plug the power cord into the back of the unit.
4. Plug the unit into the electrical outlet.

CONNECTING TO BLUETOOTH®

External devices that have a built-in Bluetooth® feature can connect wirelessly to the VWRP-3500.

Getting Connected

1. The first time you use your Bluetooth device with this player, you will need to connect or “pair” it with the player first.
2. Switch to the Bluetooth® mode, then use Bluetooth® device to pair with the device named “**VICTOR VWRP-3500.**”
3. There will be a prompt sound after the successful pairing.
4. If the pairing device is disconnected, the unit will also issue a prompt sound.

Bluetooth Out


In PHONO mode, the unit can transmit sound from the record player to external Bluetooth® speaker/headphones.

1. In PHONO mode, hold the **▶||/BT Out** key on the unit or **PLAY/PAUSE** key on the remote to enter Bluetooth® pairing status. The Bluetooth symbol in the display will be flashing.
2. Turn on the external Bluetooth® device and entering the pairing mode.
3. The turntable unit and external Bluetooth® receiver will connect automatically. This process can take up to approx. 30-45 seconds. (Note: Place the Bluetooth® receiver device within 1m of the unit to connect properly.)
4. Once turntable unit is successfully connected with the external Bluetooth® speakers, you will hear a short confirmation sound from the speakers. The Bluetooth symbol in the display will be solid.
5. If want to turn off BT Out function, hold the **▶||/BT Out** key on the unit or **PLAY/PAUSE** key on the remote again, the Bluetooth® connection between unit and Bluetooth® receivers will be disconnected.

Note: “Bluetooth Out” only works with record playback. “Bluetooth Out” cannot work in Bluetooth IN/LINE IN/USB/CD/FM function mode.





USING THE CD PLAYER

Using the CD Player

1. Press mode button to enter CD mode.
2. Press the  button to open the CD door.
3. Place a CD in the disc tray with the label facing up and press the button to close the CD door.
4. Use the controls on the unit or the remote to begin playing the loaded disc.

USING THE FM RADIO

When you switch the unit to the radio mode, you can listen to the FM radio stations.

1. This radio antenna is on the back of the machine. When you need to listen to radio, please extend the FM antenna.
2. In FM mode, press the /BT OUT on the unit or  button on the remote control to automatically search for a station. It will save the stations once searching completed.
3. Press the  or  on the unit or remote control to select station.

PLAYING FROM A USB DRIVE

You can play music from a USB drive on the unit through the built-in speakers.

1. Connect your USB drive (not included) to the USB port on the back of the unit.
2. Use the controls on the unit or remote-control to begin playing music on the USB drive.

Recording a Record to USB Drive

You can record the music playing music from a Phono record onto the USB drive.

1. Insert a USB drive to the USB port during the PHONO mode.
2. Press the **STOP/REC** key on the unit or remote during the Phono record is playing.
3. Press **STOP/REC** key again to stop the recording and replay the recorded track.
4. To delete the recorded track, press and hold the **STOP/REC** key during playback.

PLAYING A RECORD IN PHONO MODE

1. Press the mode button into PHONO mode.
2. Select the desired speed (33-1/3, 45, 78) and place the record on the turntable. (Note: When playing a 45 RPM record, please use the 45 RPM adapter.)
3. Remove the stylus protector from the stylus.

4. Release the tone arm from the tone arm clip.
5. Use the tonearm lever to raise the tonearm. Move the tonearm gently to desired position over the record.
6. Push the lift lever again to descend the tonearm slowly onto the desired position on the record to start playing.
7. When the record is finished playback, push the tonearm lever again to lift the tonearm and return the tonearm to the arm rest. Use the tonearm lever to descend the tonearm.

Note:

- When the Auto stop switch is “ON”, the record will stop automatically when finished. When the Auto stop switch is “OFF”, the record will not stop automatically when finished.
- Do not touch the stylus tip by fingers.

PLAYING AN EXTERNAL DEVICE

Line In Operation

You can play music from an external device on the built-in speakers by connecting a device to the Line In jack on the back of the unit.

1. Switch to **LINE IN** mode
2. Use 3.5mm audio cable (not included) to connect player with other audio output devices (such as mobile phone, computer, etc).

Audio Out Operation

You can connect the unit to an external stereo or speaker system by connecting a device to the AUX output jack on the back of the unit.

1. Connect the cable (not included) to the 3.5mm AUX Output jack on the back of the unit.
2. Connect the other end of the cable to the input on your external stereo system.
3. Use the device in your desired mode to hear audio on your external stereo system.

Note: The Audio output jack is not meant to be connected directly to passive/unpowered speakers. Connect to active (self-powered) speakers or an amplified stereo system.

TROUBLESHOOTING GUIDE

In case of trouble with the unit, please look through the problems below and see if you can solve them yourself before calling your dealer.

Problem	Solution
There is no power	<ul style="list-style-type: none"> • Power cord is not properly connected. • No power at the power outlet.
There is no sound from the speakers	<ul style="list-style-type: none"> • Check the unit connection between the mobile phone or other audio output devices. • Adjust the volume.
The speakers could not be connected to my Bluetooth device	<ul style="list-style-type: none"> • The device's Bluetooth function is not turned on. • The speakers are actively connected to another Bluetooth device.
The turntable speaker stop before the record is finished.	<ul style="list-style-type: none"> • Adjust the Auto-stop switch to "OFF" position.
In "Bluetooth Out" function, the unit and Bluetooth receiver do not connect successfully	<ul style="list-style-type: none"> • Turn the unit and Bluetooth receiver off. Follow the pairing steps again from the beginning. • Check whether the turntable unit is connected with another Bluetooth receiver.
Don't play disc	<ul style="list-style-type: none"> • Check whether the disc is put inserted correctly. • To check whether there is a disc in the tray. • The disc is dirty. Please clean the disc.
Button does not work	<ul style="list-style-type: none"> • Turn off the power and turn it on again after 10 seconds.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be colocated or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

IC STATEMENT

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence.

Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate this equipment. Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly. Electric and electronic equipment is marked with the crossed-out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste but should be disposed of separately. All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites or be collected from the households. Additional information is available at the technical department of your city.



SUPPORT

We do our best to offer high quality products to our customers. If you experience any issues or problems with your product, please contact customer support as many issues can be quickly resolved.

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

Naxa Technical Support

2320 East 49th St.

Vernon, CA 90058

(866) 411-6292

<http://www.naxa.com/supportcenter>

**This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC.*

VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC.

Further information at www.victor-brand.com.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.