


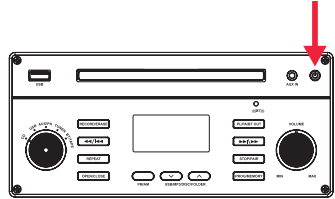 


QUICK SET UP GUIDE

MONUMENT
VWRP-5000
8-IN-1 Wood Music Center

BASIC SETUP OF THE VWRP-5000:

1. Unpack the unit and remove all packaging materials.
2. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
3. Plug the power adaptor into the electrical outlet and connect other end to the back of the unit.
4. Extend the FM antennae.
5. Press the  Button on the upper right corner of the front panel to turn the unit on.



 
PREPARE TURNTABLE FOR PLAYING RECORDS

1. Remove cap protecting stylus.
2. Remove twist tie used to secure the Tone Arm in place.

CONNECT BLUETOOTH® IN

With the Bluetooth® IN function, you can play music from an external Bluetooth® device on the speakers of your VWRP-5000.


1. Set the Function Knob to **BT/TAPE** position. "BT" will blink on display.
2. Turn on your external Bluetooth device and pair with the "VICTOR VWRP-5000" device.
3. When the Bluetooth connection is established, you will hear a short confirmation sound from the unit, and the "BT" will stop blinking on the display.
4. Start to play your favorite music on the connected device.

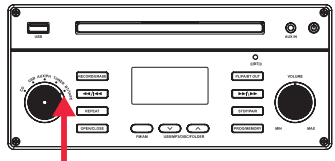

CONNECT BLUETOOTH® OUT

You can play music from your VWRP-5000 on external Bluetooth® speakers, sound bar, earbuds, or headphones.

 1. Disable the Bluetooth® function on all devices nearby (e.g. amplifier, sound bar, wireless headphone, smart phone, iPad).
2. Play music in the CD, AUX, Phono, USB, Tuner, or Tape mode.
3. Press and hold **PL/PA/BT OUT** Button to activate Bluetooth Transmitter function. The BT OUT indicator will start to blink in blue.
4. Power on your Bluetooth® speakers or headphones and activate its Bluetooth pairing mode.
5. After a few seconds, the blinking BT OUT indicator turns to solid blue, and a beep will be heard, which means your turntable will connect automatically.
6. To change volume playback, adjust the volume on your Bluetooth® device.

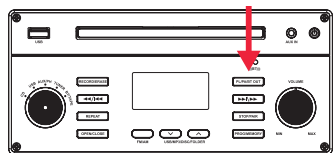

* This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at www.victor-brand.com. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION