





QUICK SET UP GUIDE


WILSHIRE

Desktop Bluetooth® Jukebox

VDTJ-1450


BASIC SETUP OF THE VDTJ-1450 JUKEBOX:

1. Determine the ideal location for the jukebox. The unit should be placed on a sturdy surface away from any heat or water sources.
2. Connect the power cable to a nearby power supply.
3. Unwind the FM antenna wire and extend to full length.
4. Press the  button to turn the unit on
5. Press the FUNC button to select the source (FM/AUX/BLUETOOTH®).
6. Rotate the VOLUME knob to adjust the desired sound level.
7. Press and hold the  button to turn the unit off.

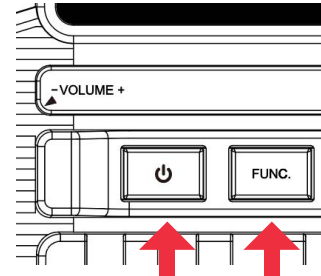

CONNECT BLUETOOTH®

1. Press the FUNC button to select Bluetooth® mode—the display will show "bt".
2. Turn on the external device and activate the Bluetooth® function.
3. Search for and select "VICTOR VDTJ-1450" on the paired devices list. If prompted for a password, enter "0000" and then press "OK" on your external device.
4. After a few seconds your Bluetooth® connection will be complete. A rising tune will indicate a successful connection has been made.

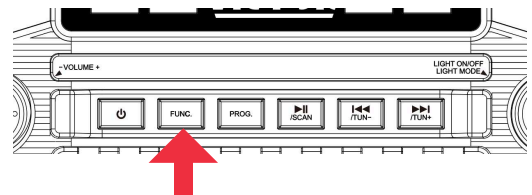

•This product has been manufactured and sold under the responsibility of NAXA ELECTRONICS INC. VICTOR and the DOG & GRAMOPHONE logo are trademarks used under license by NAXA ELECTRONICS INC. Further information at www.victor-brand.com. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

READ THE ENTIRE USER MANUAL FOR COMPLETE UNDERSTANDING OF THE PRODUCT'S OPERATION




GUIA RAPIDA DE AJUSTES

WILSHIRE
VDTJ-1450

Rockola de Mesa Bluetooth®


AJUSTE BASICO:

1. Determinar la ubicación ideal para el tocadiscos. Debe colocarse sobre una superficie nivelada y estable, libre de vibraciones, lejos de cualquier fuente de calor u agua.
2. Insertar el cordón de alimentación en un tomacorriente cercano y de fácil acceso.
3. Estirar completamente y direccionar la antena alámbrica de FM para una mejor recepción.
4. Presionar "⏻" para encender la unidad.
5. Presionar "FUNC" para seleccionar el modo de entrada de Radio FM, Entrada Auxiliar, Bluetooth®.
6. Girar el control de volumen para ajustarlo al nivel deseado.
7. Presionar y sostener "⏻" para apagar la unidad

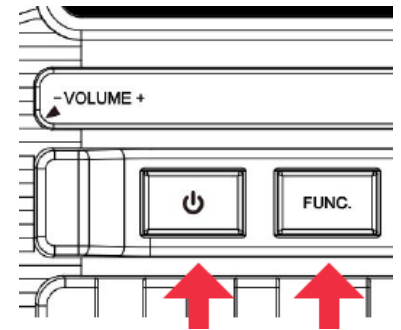

SINCRONIA BLUETOOTH®

1. Presionar "FUNC" para seleccionar el modo de Bluetooth® y la pantalla despliega "bt".
2. Activar la función de Bluetooth® en el dispositivo externo.
3. Activar la búsqueda de dispositivos Bluetooth®. Nota: la distancia entre la unidad y el dispositivo Bluetooth® externo debe ser de 10 metros máximo. En la lista de dispositivos desplegados, seleccionar "VICTOR VDTJ-1450" para sincronizarlos. En caso de requerir una contraseña, ingresar "0000" y presionar "Aceptar" en el dispositivo externo.
4. Unos segundos más tarde, si la sincronía Bluetooth® es exitosa, sonara una melodía ascendente de confirmación.

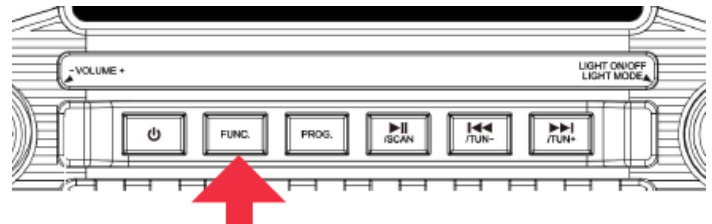

Este producto es fabricado y vendido bajo la responsabilidad de NAXA ELECTRONICS INC.

Los logotipos de VICTOR y el Perro con el Fonógrafo son marcas registradas usadas bajo licencia por NAXA ELECTRONICS INC. Para más información en www.victor-brand.com.

Todos los demás productos, servicios, empresas, marcas registradas, nombres comerciales o de productos y logotipos a los que se hace referencia en este documento son propiedad de sus respectivos dueños.

LEER EL MANUAL DE OPERACION PARA ENTENDER POR COMPLETO LA OPERACION DEL PRODUCTO